

# Almer Arc 2

## Initial Configuration


### 1 Install the App




- Search for “Almer” in the Google Play Store or Apple App Store and download.

The app is used exclusively to connect the glasses to a new Wi-Fi network or new headphones. Once connected, the app is not required anymore.


### 2 Connect the Glasses

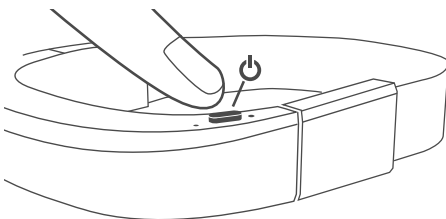

- Turn on the glasses and wait for the TeamViewer start screen to appear.

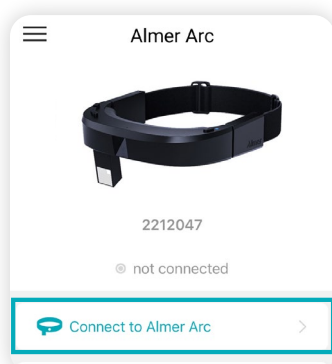


- Open the Almer app and select “Connect to Almer Arc”.

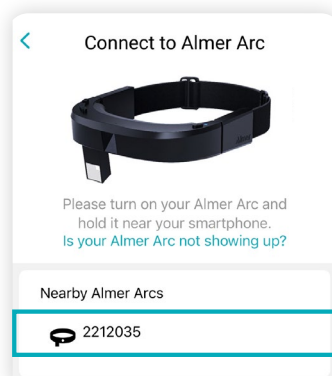

- Subsequently, select the appropriate glasses.


### 3 Connect WLAN

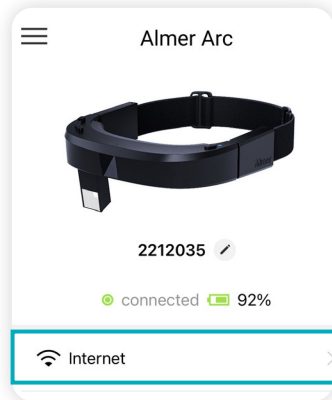


- Select “Internet” from the main menu.
- Then select the desired Wi-Fi and enter the password.

The glasses are now connected to the Wi-Fi. Upon booting, the glasses automatically connect to the previously saved Wi-Fi networks.

### 5 Connect Headphones

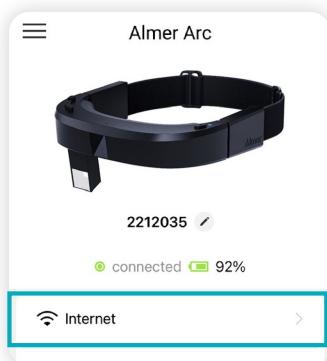

- Activate Bluetooth pairing mode on the headphones. On many devices you need to press and hold the power button for this.

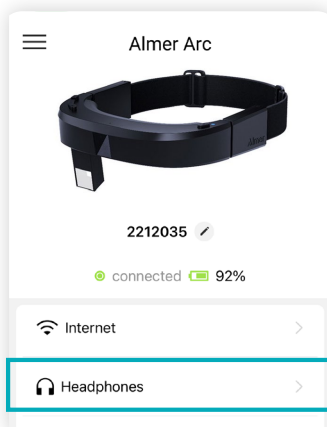

- Select “Headphones” from the main menu and choose the appropriate device.

The glasses are now connected to the headphones. Every time the Arc is turned on, the glasses automatically connect to the headphones. If the glasses are also used with, for example, a smartphone, it may occur that the Arc cannot connect as only one device can be connected at a time.